

Price Evaluation List for the JCB Spare Parts and Maintenance for the fiscal year 2023-2024

			Spareparts	Labour Charge
Sl.no	Article	unit	Ugyen	Ugyen
1	Engine Head assy (JCB SP)	no	18500	
2	Engine block	no	55000	
3	Crankshaft	no	22000	
4	Cam shaft	no	15500	
5	Piston	no	3500	
6	Piston Rings	no	5500	
7	Crank shaft Main bearing set	no	2750	
8	Cam bearing bush	no	1850	
9	engine head gasket	no	5500	
10	engine cylinder liner	no	4500	
11	joint gasket for exhaust deffuser	no	1550	
12	exhaust manifold gasket	no	1550	
13	fly wheel assy	no	8500	
14	fear end oil seal for front cover	no	1550	
15	diesel filter assy	no	2750	
16	diesel filter assy	no	2750	
17	fuel filter element	no	1550	
18	benjo bolt m14 x 1.5	no	750	
19	copper washer 14x20	no	150	
20	fuel pump assy	no	57500	
21	lub oil supply pipe	no	1850	
22	fuel pipe	no	1850	
23	diese high pressure pipi set	no	2800	
24	injector assy	no	15000	
25	bush for injector	no	1550	
26	o ring for injector	no	550	
27	inlet manifold assy(top opening)	no	4100	
28	rubber hose (compressor outlet)	no	1850	
29	joint for air inlet manifold	no	850	
30	joint for air pipe	no	850	
31	joint for plate	no	850	
32	lub oil filter and head assy	no	3500	
33	lub oil element	no	1550	
34	lub oil pump assy	no	5500	
35	oil sump	no	4500	
36	oil sump joint	no	1550	
37	oil sump drain plug assy	no	850	

38	starter motor assy	no	22500	
39	starter motor bindex pinion	no	2750	
40	starter motor armature	no	5500	
41	starter motorfield coil	no	5500	
42	starter motor carbon brusher holder	no	2150	
43	starter motor carbon brush	no	550	
44	starter motor bearing	no	1200	
45	hose for air cleaner	no	1950	
46	hose for TC cover	no	1950	
47	drive clamp type 80mm dia	no	650	
48	sleeve for air cleaner hose	no	650	
49	radiator fan mounting	no	3700	
50	alternator assy	no	18500	
51	alternator front bracket	no	2100	
52	alternator rear bracket	no	2100	
53	alternator brush holder	no	2500	
54	alternator carbon brush	no	550	
55	alternator stator	no	3500	
56	alternator rotor	no	3500	
57	alternator rectifier	no	2850	
58	alternator bearing	no	1550	
59	alternator eye bolt	no	700	
60	oil seal fly wheel end	no	1250	
61	piton assy(turbo charger engine)	no	4500	
62	piston ring wit pin	no	3500	
63	connecting rod	no	3750	
64	connecting rod big end bearing	no	1200	
65	connecting rod small end bush	no	900	
66	JCB battery 12v 130 AH	no	12500	
67	push rod	no	1200	
68	valve tappet	no	1500	
69	rocker cover	no	1500	
70	joint for rocker cover	no	1500	
71	suction tube sub assy	no	8500	
72	thermostate valve	no	2800	
73	joint for thermostate cover	no	1800	
74	bypass hose	no	1650	
75	cap for thermostate cover	no	1550	
76	worm dive hose clamp	no	950	
77	turbo charger assy	no	75000	

78	gasket for turbo charger	no	2550	
79	joint for adaptor ring	no	1750	
80	turbo oil pipe inlet	no	2150	
81	joint for adaptor turbo	no	1550	
82	lub oil drain pipe	no	1250	
83	hose for turbo drain pipe	no	1250	
84	V belt	no	1550	
85	valve rocker assy	no	3750	
86	water pump assy	no	9500	
87	water pump joint	no	1550	
88	engine overhauling gasket full set	no	10500	
89	air cleaner filter assy	no	7500	
90	air cleneaner element inner	no	1750	
91	air cleaner element outer	no	2150	
92	engine mounting rear	no	1850	
93	engine mounting front	no	1850	
94	radiator assy	no	32000	
95	radiator hose lower	no	2150	
96	radiator hose upper	no	2150	
97	radiator hose clamp	no	550	
98	inter cooler assy	no	27000	
99	inter cooler hose upper	no	2150	
100	inter cooler hose lower	no	2150	
101	radiator mounting rubber	no	1550	
102	oil cooler element	no	2750	
103	turbo chargergasket	no	2100	
104	joint for turbo charger	no	2100	
105	inlet manifold gasket	no	1550	
106	Rear Bucket (JCB)	no	55000	
107	Rear Bucket bush	no	1550	
108	Rear Bucket Pin	no	1750	
109	Rear Bucket side cutter	no	2500	
110	Rear Bucket side cutter bolt and Nut	no	550	
111	Rear Bucket Tooth	no	1850	
112	Rear Bucket Tooth Bolt and nut	no	550	
113	Rear Bucket shim	no	450	
114	Hydraulic Tank	no	18500	
115	Hydraulic Tank element suction	no	2750	
116	Hydraulic Tank Cap	no	2500	
117	Stabliser sideshift hydraulic jack	no	12500	

118	Pad lower for stabliser sideshift	no	1750	
119	Pad upper for stabliser sideshift	no	1750	
120	Pad assembly wear for stibliser leg	no	1750	
121	Pin pivot upper for stabliser sideshift	no	2150	
122	Pin pivot lower for stabliser sideshift	no	2150	
123	Hydraulic cylinder for stabliser sideshift	no	5500	
124	Cabin windscreen	no	14500	
125	Glass,sixlight, left rear	no	4500	
126	Glass, sixlights, right rear	no	4500	
127	Glass, sixlights, left side	no	3500	
128	Glass, sixlights, right side	no	3500	
129	Glass front quarter left	no	2250	
130	Glass front quarter right	no	2250	
131	Door glass right upper	no	3000	
132	Door glass right lower	no	3000	
133	Door glass left upper	no	2200	
134	Door glass left lower	no	2200	
135	Lock door handle with keys right	no	2150	
136	Lock door handle with keys left	no	2150	
137	Glass rear window clear	no	5500	
138	Stud, gas for rear window clear	no	1550	
139	Link rear window clear	no	1200	
140	Arm loader short for front bucket	no	65000	
141	Bush for Arm loader	no	1250	
142	Pin pivot for Arm loader	no	1750	
143	Pin pivot for Arm loader	no	1750	
144	Bush for link Arm loader	no	1250	
145	Pin for link arm loader	no	1550	
146	Carriage king post	no	37500	
147	Linner bearing for carriage king post lower	no	1550	
148	Linner bearing for carriage king post upper	no	1550	
149	Hydra clamp assy for carriage king post	no	650	
150	Hydra clamp bolt n nut	no	550	
151	Seal for linner bearing	no	1550	
152	Pin pivot for king post	no	1750	
153	king post assy	no	32000	
154	liner bearing for king post	no	1550	
155	Shim for king post	no	750	
156	Pivot pin got king post lower	no	2100	
157	Pivot pin for king post upper	no	2100	

158	Linner bearing for boom lower	no	1500	
159	Seal for boomPivot pin for boom centre	no	1550	
160	Pivot pin for boom lower	no	2500	
161	Pivot pin for boom upper	no	2500	
162	Linner bearing for dipper	no	1250	
163	Tipping link	no	2750	
164	Tipping lever	no	2750	
165	pin for tipping link	no	1350	
166	pin for tipping lever	no	1250	
167	pin for dipper lower	no	1250	
168	pin for dipper upper	no	1250	
169	bush for tipping link	no	1550	
170	seal for tipping link	no	1250	
171	Light head assy	no	5500	
172	Light working rear cab	no	2250	
173	light working front cab	no	2250	
174	Spring brake pedal	no	650	
175	steering box assy	no	35000	
176	Steering box repair kit	no	18500	
177	Transmission oil filter	no	2250	
178	propullar shaft cross bearing	no	3250	
179	Propullar shaft assy rear	no	21000	
180	Propullar shaft assy front	no	18000	
181	Propullar shaft assy four wheel	no	16500	
182	Hand brake cable	no	3500	
183	JCB LABOURS CHARGES			
184	Engine overhauling (JCB JOB)	no	18000	
185	Engine Top overhauling	no	6500	
186	Tappet cover packing changig	no	600	
187	Radiator opening and refitting	no	1850	
188	Radiator opening, servicing anf refitting	no	2500	
189	Thermotate valve changing	no	550	
190	Radiator hose opening and refitting	no	350	
191	Fan belt opening and refitting	no	200	
192	Fan opening and fitting	no	350	
193	Air clenaner assy opening and refitting	no	550	
194	Air cleaner fiilter changing	no	550	
195	Air breather changing	no	350	
196	Silencer box opening and refitting	no	700	
197	Steering box opening and refitting	no	3000	

198	Steering box overhauling	no	4500	
199	Steering cross changing	no	550	
200	Steering colum opening and fitting	no	1550	
201	Engine oil cahnging	no	250	
202	Oil filter changing	no	250	
203	Diesel filter changing	no	250	
204	Water seperator filter changing	no	300	
205	AC pump kit changing	no	350	
206	Diesel pipe opening and fitting	no	350	
207	Diesel filter (EICHER)	no	550	
208	Water seperator filter	no	2750	
209	Mobile filter	no	550	
210	Bypass filter	no	550	
211	Air Cleaner Filter	no	2750	
212	Air cleaner filter assembly	no	5500	
213	Oil pressure switch	no	750	
214	Water pump assy	no	6500	
215	Thermostate valve	no	1200	
216	Head gasket	no	3500	
217	Tappet cover gasket	no	1250	
218	Engine overhauling gasket set	no	4500	
219	Timing cover oil seal	no	750	
220	Timing belt	no	850	
221	Fan belt	no	600	
222	Dock Pulley	no	2750	
223	Engine tempature switch	no	800	
224	Piston	no	2200	
225	Piston Ring	no	1760	
226	Connecting Rod bearing	no	550	
227	Main Bearing	no	850	
228	Crankshaft Thrust washer set	no	750	
229	Oil jet	no	1250	
230	Cam shaft	no	7500	
231	Crankshaft	no	9500	
232	Engine head	no	15500	
233	Engine head valve set	no	1250	
234	Valve seat	no	550	
235	Valve Guide	no	550	
236	Valve spring set	no	550	
237	Cam shaft bearing	no	550	

238	Push rod	no	550	
239	Cam shaft gear	no	2500	
240	FIP timing gear	no	2750	
241	Crankshaft gear	no	3150	
242	Drain plug bolt	no	550	
243	Oil stainer	no	1800	
244	Timing cover	no	2250	
245	Engine mounting	no	1500	
246	Fan	no	850	
247	Fan viscous	no	2750	
248	Injector nozzle	no	3500	
249	Fuel Injection Pump assembly	no	25000	
250	Injector nozzle pipe set	no	1850	
251	Injector nozzle washer set	no	300	
252	AC pump assembly	no	2500	
253	Ac pump repair kit	no	750	
254	Clutch plate	no	5500	
255	Pressure plate	no	12500	
256	Release bearing	no	2750	
257	Fly wheel assembly	no	3500	
258	Fly wheel ring	no	1850	
259	Clutch master cylinder	no	3500	
260	Clutch lower cylinder	no	2850	
261	Clutch master cylinder steel pipe(inlet)	no	1250	
262	Clutch master cylinder steel pipe (outlet)	no	1250	
263	Clutch lower cylinder steel pipe(inlet)	no	1050	
264	Clutch lower cylinder steel pipe(Outlet)	no	1050	
265	Brake master servo assembly	no	10500	
266	Wheel cylinder assembly	no	3500	
267	Brake lining	no	1250	
268	Brake shoe return spring(Big)	no	850	
269	Brake shoe return spring (Small)	no	550	
270	Brake Drum Front		3500	
271	Brake drum rear	no	4200	
272	Brake pipe Rear	no	1750	
273	Brake pipe front	no	1550	
274	Front hub bearing inner	no	2750	
275	Front hub bearing outter	no	2550	
276	Axle bering	no	1950	
277	Axle oil seal	no	650	

278	Front hub oil seal	no	550	
279	Rear hub bearing inner	no	650	
280	Rear hub bearing outer	no	550	
281	Rear hub oil seal inner	no	650	
282	Rear hub oil seal outer	no	550	
283	Rear check nut	no	700	
284	Rear check nut lock	no	550	
285	Rear check nut spacer	no	550	
286	Wheel nut and bolt front	no	750	
287	Battery 12v 100AH	no	12500	
288	Wheel nut and bolt rear	no	850	
289	Differntial assembly (TATA 1109)	no	155000	
290	Crown Assembly	no	55000	
291	Bivel box assembly	no	22000	
292	Bivel Box Repair kit assembly	no	18500	
293	Tail pinion	no	4500	
294	Tail pinion oil seal	no	650	
295	Tail pinion check nut	no	750	
296	Bivel box thrust washer set	no	1250	
297	Rear axle shaft	no	5500	
298	Front axle assembly	no	4500	
299	Front king pin	no	2750	
300	King pin bearing	no	1250	
301	King pin thrust bearing	no	850	
302	King pin bush	no	550	
303	Ties rod assembly	no	3500	
304	Tie rod end	no	550	
305	Drag link assembly	no	2750	
306	Drag link kit	no	550	
307	Front knuckle	no	3500	
308	Propullar shaft assembly(Long)	no	9500	
309	Propullar shat yoke	no	2500	
310	Propullar shaft teeth	no	2500	
311	Cross bearing	no	1550	
312	Centre bearing	no	2100	
313	Centre bearing assembly	no	2750	
314	Propullar shaft assembly (Short)	no	6500	
315	Propulat shaft flange	no	2150	
316	Propullar shaft nut and bolt	no	50	
317	Gear box assembly	no	75000	

318	Top shaft	no	4500	
319	Main shaft	no	8500	
320	Counter shaft	no	7500	
321	Top shaft bearing	no	2750	
322	Top shaft pilot bearing	no	1750	
323	Main shaft bearing	no	2850	
324	Counter shaft bearing	no	1850	
325	Brass ring	no	1750	
326	Revise idler gear	no	3500	
327	1st gear	no	3800	
328	2nd gear	no	3600	
329	3rd gear	no	3200	
330	4th gear	no	2700	
331	sleeve gear	no	2750	
332	Gear box mounting	no	850	
333	Clutch housing bolt	no	350	
334	Controlling assembly	no	4200	
335	Controlling packing	no	250	
336	Controlling magnetic switch 12v	no	3500	
337	Trubo charger assembly	no	45000	
338	Turbo charger repair kit	no	8500	
339	Turbo charger packing	no	250	
340	Exhaust manifold	no	2750	
341	Exhaust manifold steel packing	no	550	
342	Turbo charger intake hose	no	1850	
343	Turbo charger exhaust pipe	no	1850	
344	Turbo cahrger exhaust pipe steel packing	no	1550	
345	Self satrter assembly	no	22000	
346	Self Starter armature	no	4500	
347	self starter carbon holder with carbon brush	no	2100	
348	self starter armature bush(3pcs)	no	300	
349	self starter bendix pinion	no	2750	
350	self starter ignition coil	no	2750	
351	self starter field coil	no	3500	
352	Alternator assembly	no	18500	
353	Alternator front barcket	no	1850	
354	Alternator rear bracket	no	1850	
355	Alternator Brush holder	no	2100	
356	Alternator rotor	no	3250	
357	Alternator Stator	no	2550	

358	Alternator bearing front	no	550	
359	Alternator bearing rear	no	550	
360	Alternator carbon brush	no	300	
361	Alternator Rectifier	no	1850	
362	Wiring harness assembly	no	5500	
363	Head light assembly	no	2150	
364	Indicator light assembly	no	1550	
365	Back light assembly	no	1550	
366	Fog light assembly	no	850	
367	Starter Relay	no	1850	
368	Head light relay	no	1550	
369	Horn Relay	no	1550	
370	Wiper Relay	no	1550	
371	Main fuse	no	850	
372	Fuse 10amp	no	50	
373	Fuse 15amp	no	50	
374	Fuse 20amp	no	50	
375	Fuse 30amp	no	50	
376	Head light bulb	no	200	
377	Indicator bulb	no	50	
378	Brake bulb	no	50	
379	DB bulb	no	25	
380	Push type bulb	no	25	
381	Back gear light bulb	no	50	
382	Steering Box assembly	no	35000	
383	Steering worm shaft assembly	no	8500	
384	Steering worm shaft ball bearing(SET)	no	1850	
385	Power Steering pump assembly	no	7500	
386	Power steering hose pipe outlet	no	1550	
387	power steering pipe inlet	no	1550	
388	Power steering oil container	no	1550	
389	Brake Booster Rear	no	12500	
390	Brake Booster front	no	10500	
391	Brake Booster Hose pipe inlet	no	1750	
392	Brake booster hose pipe outlet	no	1750	
393	Radiator assembly	no	18000	
394	Radiator hose lower	no	850	
395	Radiator hose upper	no	850	
396	Radiator Hose clamp	no	300	
397	Coolant Tank	no	2500	

398	Radiator fan cover	no	2100	
399	Inter cooler assembly	no	17500	
400	Inter cooler hose pipe outlet	no	1750	
401	Inter cooler hose pipe inlet	no	1750	
402	Oil pump assembly	no	4500	
403	Brake lining Rear	no	2500	
404	Brake lining front	no	2100	
405	wheel cylinder assy front	no	2750	
406	wheel cylinder assy rear	no	2950	
407	Brake shoe return spring(big)	no	550	
408	Wiper Blade	no	350	
409	Wiper arm	no	550	
410	Wiper Link	no	1550	
411	Wiper motor	no	3500	
412	Tata 1109 Battery 12V 150AH	no	14500	
413	Comination switch assy	no	3500	
414	Ignition switch assy	no	2500	
415	Speedometer	no	1800	
416	Speed censor	no	850	
417	Engine overhauling (JOB_TATA/Eitcher)	no	18000	
418	Gear box over hauling	no	4500	
419	Clutch overhauling	no	3800	
420	Diffrential crown overhauling	no	4000	
421	Steering box overhaulung	no	2500	
422	hub gerasing	no	550	
423	brake lining changing	no	550	
424	Front king pin overhauling	no	1250	
425	Hub bearing changing	no	550	
426	Hub oil seal changing	no	350	
427	Brake servicing	no	350	
428	Drag link assembly changing	no	750	
429	Drag link end changing	no	550	
430	Tie rod assembly changing	no	650	
431	Tie rod end changing	no	550	
432	Axle oil seal changing	no	650	
433	Axle changing	no	650	
434	Diffrential assembly changing	no	3500	
435	Steering box changing	no	2100	
436	Power steering pump changing	no	1500	
437	Steering hose pipe changing	no	550	

438	Power steering hose pipe changing	no	550	
439	Steering box oil line checking and servicing	no	650	
440	Power steering oil line checking and servicing	no	650	
441	Radiator assembly changing	no	1850	
442	Radiator opening/ fitting and servicing	no	2500	
443	Radiator hose changing	no	550	
444	Radiator bracket changing	no	550	
445	Thermostate valev changing	no	550	
446	water pump changing	no	2100	
447	Water pump opening/fitting and servicing	no	2500	
448	Inter cooler assembly changing	no	1550	
449	Inter cooler opening/fitting and servicing	no	2500	
450	Inter cooler hose pipe changing	no	550	
451	Propullar shaft opening/fitting	no	550	
452	Propullar shaft cross bearing change	no	550	
453	Propullar shaft yoke change	no	550	
454	Propullar shaft flange change	no	550	
455	Propullr shaft teeth change	no	550	
456	Propullar shaft Centre bearing change	no	550	
457	Tail pinion oil seal change	no	650	
458	Tail pinion bearing change	no	650	
459	Engine oil cahnge	no	200	
460	Oil filter change	no	200	
461	Diesel filter change	no	200	
462	water seperator filter change	no	300	
463	Diffrential oil change	no	200	
464	Gear oil change	no	200	
465	Coolant change	no	200	
466	AC pump assy change	no	550	
467	AC pump repair kit change	no	550	
468	Gear box opening/fitting	no	3000	
469	Diffrential opening / fitting	no	3000	
470	Engine mounting change	no	850	
471	Gear box mounting change	no	700	
472	Rear spring opening/fitting	no	1550	
473	Front spring opening/fitting	no	1550	
474	Rear spring bush change	no	550	
475	Rear spring pin change	no	450	
476	Spring leaf changing	no	450	
477	Spring centre bolt changing	no	550	

478	Spring U bolt changing	no	550	
479	Spring hanger changing	no	550	
480	spring hanger bracket changing	no	550	
481	Clutch pedal opening/fitting	no	350	
482	acclerator pedla opening/fitting	no	350	
483	Clutch pedal return spring change	no	300	
484	Brake pedal return spring changing	no	300	
485	acclerator pedal return spring changing	no	300	
486	Vaccum tank opening /fitting	no	550	
487	Air compressor assembly opening/fitting	no	550	
488	Air compressor overhauling	no	1550	
489	Air compressor head opening/fitting	no	750	
490	Air compressor head changing	no	750	
491	vaccum pipe opening/fitting	no	550	
492	Air dier assembly opening and fitting	no	550	
493	Air dier repair kit change and servicing	no	1250	
494	Hand brake lever assembly changing	no	550	
495	Hydraulic cylinder opening and refitting	no	2000	
496	Hydraulic cylinder seal kit changing	no	3000	
497	Hydraulic hose pipe opening and refitting	no	550	
498	Hydraulic pump opening, servicing and refitting	no	2500	
499	Hydraulic pump overhauling	no	3500	
500	PTO pump oepning, servicing and refitting	no	3250	
501	Hydraulic Tank opening, servicing and refitting	no	1550	
502	Refuse compactor centre boom Hydraulic cylinder opening and refitting	no	2000	
503	Refuse compactor centre boom Hydraulic cylinder overhauling	no	4500	
504	Refuse compacyor centre boom brcket opening and refitting	no	1850	
505	Refuse compactor Hydarulic lever assy. opening ,servicing and reffiting	no	1550	
506	Sewer pull suction pump opening and refitting	no	2500	
507	Sewer pull suction pump complete overhauling	no	5500	
508	Self Starter assy opening and refitting	no	550	
509	Self satrter overhauling	no	1250	
510	Alternator opening anf refitting	no	550	
511	Alternator overhauling	no	1250	
512	Head light assy changing	no	300	
513	Side indicator light assy changing	no	200	
514	Brake light assy changing	no	200	
515	Head light bulb changing	no	100	
516	side indicator light bulb changing	no	50	
517	Brake light bulb changing	no	50	

518	Back gear light bulb changing	no	50	
519	Wiring harness complete repairing	no	8500	
520	wiring harness half repairing	no	4500	
521	Head light line checking and repairing	no	750	
522	side indicator light checking and repairing	no	550	
523	Back light line checking and repairing	no	550	
524	Back gear light line checking and repairing	no	550	
525	Self starter line checking and repairing	no	550	
526	Alternator line checking and repairing	no	550	
527	Ingition switch opening and refitting	no	1250	
528	Combination switch opening and refitting	no	1250	
529	Ignition switch assy changed	no	1250	
530	Combination switch assy changed	no	1250	
531	Air cleaner filter changing	no	250	
532	Steering colum opening and reffiting	no	2150	
533	Steering cross changing	no	750	
534	Steering box overhauling	no	3500	
535	Wheel nut and bolt changing	no	200	
536	Battery pole new making	no	1200	
537	Batter cable changing	no	350	
538	Head light relay changing	no	200	
539	Horn Relay changing	no	200	
540	Door opening and refitting	no	550	
541	Door pad changing	no	200	
542	Door lock changing	no	350	
543	Door handle changing	no	350	
544	Door glass changing	no	550	
545	Door glass channel changing	no	350	
546	Door regulator machine changing	no	550	
547	Looking mirror changing	no	200	
548	Door hinges changing	no	550	
549	Windsheild glass changing	no	3000	
550	Windsheid glass rubber changing	no	3000	
551	wiper motor changing	no	2550	
552	wiper arm changing	no	200	
553	wiper blade changing	no	50	
554	wiper link changing	no	550	
555	Dashboard assy opening and refitting	no	2500	
556	wiring harness complete changing	no	3500	
557	Roof ceiling opening and refitting	no	750	

558	Brake vacuum pipe changing	no	550	
559	Chassis cross member opening and refitting	no	2500	
560	Refuse compactor rear door assy opening and refitting	no	4500	
561	Refuse compactor rear half door opening and refitting	no	2500	
562	Sewer pull rear door assy opening and refitting	no	4000	
563	Rear Spring Assembly	no	1850	
564	Front spring assembly	no	1550	
565	Rear spring main leaf	no	1550	
566	Rear spring second leaf	no	1550	
567	Rear spring aux A	no	1550	
568	Rear spring aux B	no	1550	
569	Rear spring 5th leaf	no	1550	
570	Rear spring 4th leaf	no	1550	
571	Front spring main leaf	no	1550	
572	Front spring 2nd leaf	no	1550	
573	Front spring 3th leaf	no	1250	
574	Front spring 4th leaf	no	1250	
575	Rear centre bolt	no	1250	
576	Front centre bolt	no	850	
577	Front spring bush	no	850	
578	Front spring pin	no	550	
579	Rear spring pin	no	550	
580	Front spring hanger	no	850	
581	Rear spring hanger	no	850	
582	Mobile Oil 14W40	Ltrs	400	
583	Gear oil EP90	Ltrs	400	
584	Crown oil 85W140	Ltrs	400	
585	Power steering oil TQ	Ltrs	400	
586	Brake oil DoT3	Ltrs	400	
587	Coolant	Ltrs	400	
588	Transmission Oil 10W	Ltrs	400	
589	Hydraulic Oil grade 68	Ltrs	450	
590	Grease	Kgs	400	
591	Grease Gun with sets	no	2550	
592	Tata 1109 Battery 12V 150AH	no	12500	
593	JCB Rear Tyres with tube set 14.00-25 Heavy duty	Pairs	0	
594	JCB front Tyres with tube set 16.9- 28 12PR Tire	Pairs	0	
595	Tata Rear rough Tyre with tube set 8.25 R-20	Pairs	0	
596	Tata Rear plain Tyre with tube set 8.25 R-21	Pairs	0	
597	Eicher Rear rough tyre with tube set 7.5 R-16	Pairs	0	

598	Eicher Rear plain tyre with tube set 7.5 R-17	Pairs	0	
599	Eicher Rear rough tyre with tube set size 215/75 R -17.5	Pairs	0	
600	Eicher Rear plain tyre with tube set size 215/75 R - 17.5	Pairs	0	
601	Eicher Rear rough tyre with tube set size 235/75 R -17.5	Pairs	0	
602	Eicher Rear plain tyre with tube set size 235/75 R - 17.5	Pairs	0	
			440 nos	

